


STRIP05_stl-psi Guidance & Alternate Details

Standard Drawing Guidance (do not show on plans):

Modify drawing as necessary.


Remove non-applicable rows in table.

- $\begin{tabular}{ll} \begin{tabular}{ll} \beg$
- (B) Dimension to clear bearing stiffener (1 1/2" Min.). For rehab bridge, dimension should be based on shop drawing or field check.
- Use 3". For rehab bridge, dimension should be based on shop drawing or field check.
- Duse Square, Right Advanced or Left Advanced
- (E) 3/4" (Min.) @ 60° Verify only. Do not show on plans.
- fig @ 60°+ 1/2" + (2 x 3/4") (Min.). Verify only. Do not show on plans.
- © Use 6" long angle. For rehab bridge, modify angle length based on shop drawing or field check.
- (H) Delete precast panel for CIP slab.

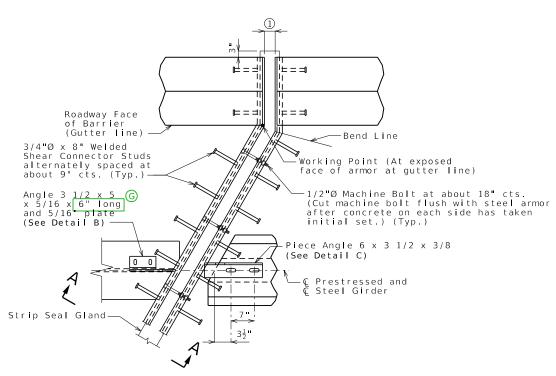


PART PLAN


Left Advanced

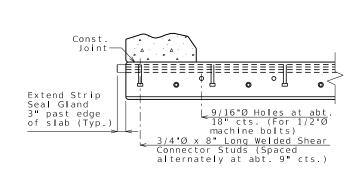

PART SECTION B-B

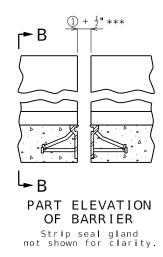

Alternate details for Type B barrier (SBC)

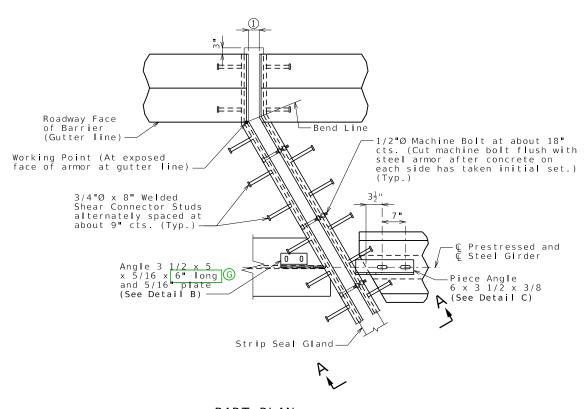

PART PLAN
Right Advanced